

RECORDING: Cassette Tape

1. Turn on the wireless microphone



2. Press the power button to turn on the Cassette/CD player.



3. Press the eject button to open the cassette holder.
4. Load a recordable cassette tape into the cassette holder and close.



5. The green PLAY (right arrow) indicator on the PLAY control button will begin to flash indicating the tape is loaded properly.



6. Set DOLBY NOISE REDUCTION control switch to the OFF position.



7. Set the REVERSE MODE to the desired position. It is usually kept in the Continuous play mode (oval).



8. Set the ALC control mode switch to the ON position.



9. Press the REC/PAUSE control button. The REC indicator will begin to flash red indicating the tape is in the record pause mode.



10. Press the PLAY(right arrow) button to begin recording in the forward direction. When the tape is recording both the red REC indicator and the green (right arrow) PLAY button indicator will change from flashing to the constant ON mode.



11. To pause the tape during recording press the REC/PAUSE control button. Press the PLAY(right arrow) button to resume recording.
12. To stop the tape during recording, press the STOP button.